


Connecting the patch lead

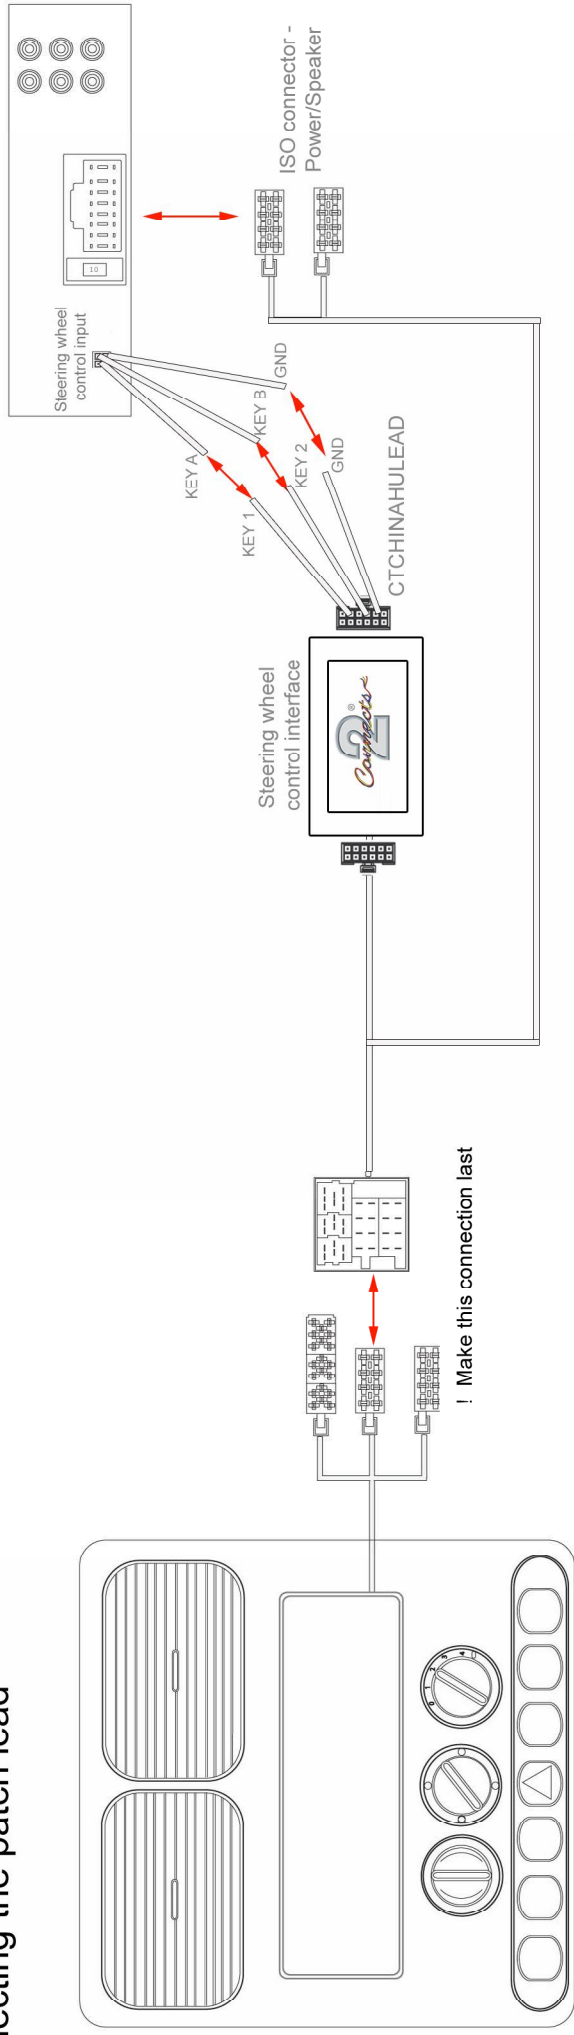

Programming the aftermarket head unit

1. Enter the head unit settings menu and select steering wheel control setup menu.



2. Push a button on the steering wheel controls, followed by the corresponding button on the head unit. Repeat this process until all required buttons are programmed.



3. Save the settings on the head unit

